


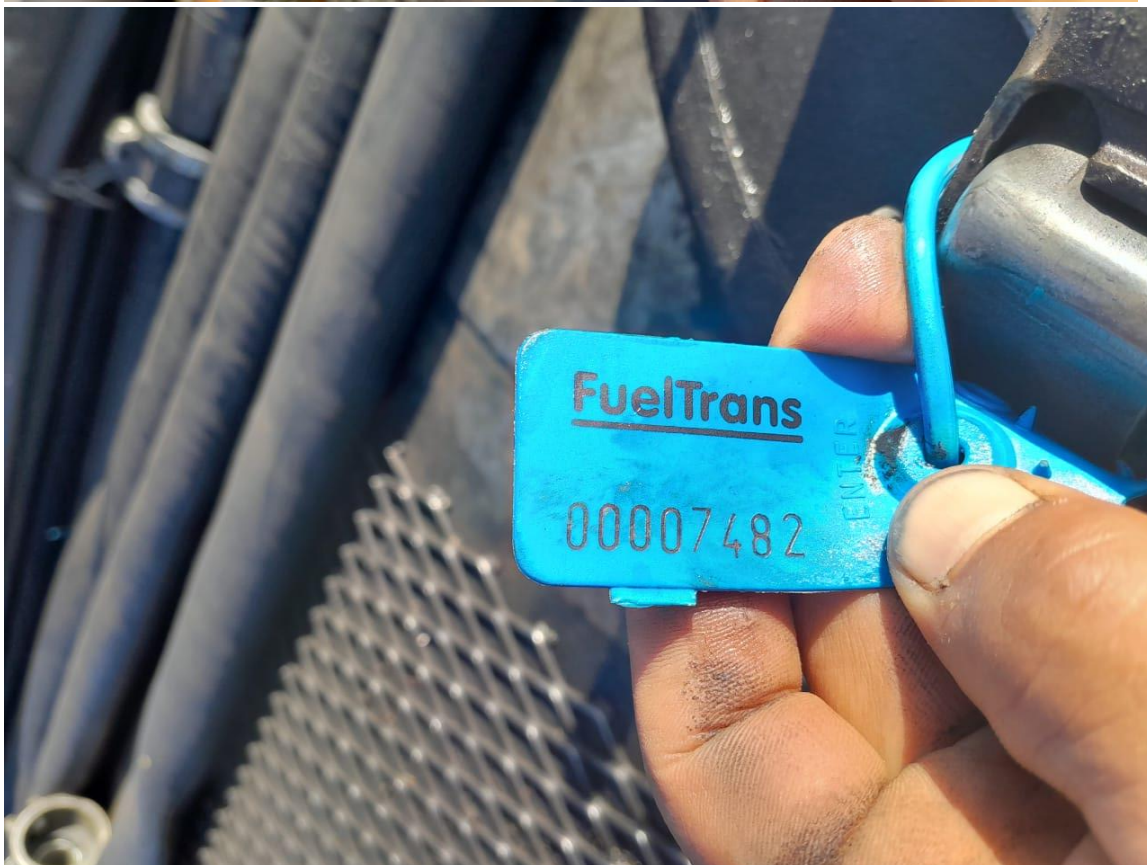











VEEDER-ROOT
TICKET PRINTER
OPERATING INSTRUCTIONS
START PRINT: INSERT TICKET. ROTATE KNOB AS FAR AS POSSIBLE (INTERNAL STOP).
DELIVER PRODUCT. REMOVE TICKET. FINISH PRINT: DO NOT PULL TICKET. ROTATE KNOB AS ABOVE.
0788811 001 FORM NO. 640867000 SERIAL NO.

13005

MODEL NO. 640867000